


Einstell-Nadellager RPNA ohne Innenring

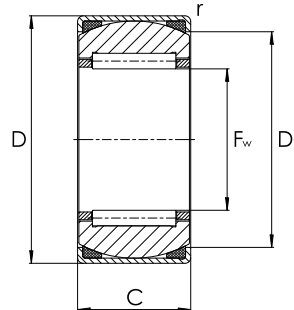

RPNA

Maßtable - Abmessungen in mm											
Hauptabmessungen			Tragzahlen		Ermüdungsgrenzbelastung C_{ur} N	Grenzdrehzahl n_G min ⁻¹	Gewicht m ≈ g	Kurzzeichen	Abmessungen		
F_w	D	C	dyn. C_r N	stat. C_{0r} N					D_1	r	min.
15	28	12	7.800	7.900	1.430	24.100	32	RPNA15/28	24,5	0,8	
18	32	16	14.100	16.200	3.000	22.100	52	RPNA18/32	27,0	0,8	
20	35	16	14.600	17.500	3.200	21.100	62	RPNA20/35	30,5	0,8	
25	42	20	21.300	30.500	5.300	17.800	109	RPNA25/42	36,5	0,8	
28	44	20	24.800	34.000	5.900	15.800	112	RPNA28/44	38,5	0,8	
30	47	20	25.500	36.000	6.300	14.800	125	RPNA30/47	42,0	0,8	
35	52	20	27.500	41.500	7.300	12.900	131	RPNA35/52	47,5	0,8	
40	55	20	29.500	47.000	8.300	11.400	141	RPNA40/55	50,5	0,8	
45	62	20	31.000	53.000	9.300	10.200	176	RPNA45/62	58,0	0,8	