
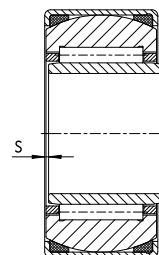


Einstell-Nadellager PNA mit Innenring

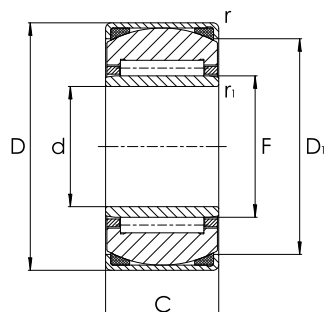

PNA

axialer Verschiebeweg „s“

Maßtabelle - Abmessungen in mm

Hauptabmessungen			Tragzahlen		Ermüdungsgrenzbelastung C_{ur} N	Grenzdrehzahl n_G min ⁻¹	Gewicht m ≈ g	Kurzzeichen	Abmessungen					
d	D	C	dyn. C_r N	stat. C_{0r} N					F	B	D ₁	r min.	r ₁ min.	s min.
12	28	12	7.800	7.900	1.430	24.100	37	PNA12/28   	15,0	12,0	24,5	0,8	0,3	0,5
15	32	16	14.100	16.200	3.000	22.100	62	PNA15/32   	18,0	16,0	27,0	0,8	0,3	0,5
17	35	16	14.600	17.500	3.200	21.100	73	PNA17/35   	20,0	16,0	30,5	0,8	0,3	0,5
20	42	20	21.300	30.500	5.300	17.800	136	PNA20/42   	25,0	20,0	36,5	0,8	0,3	0,5
22	44	20	24.800	34.000	5.900	15.800	145	PNA22/44   	28,0	20,0	38,5	0,8	0,3	0,5
25	47	20	25.500	36.000	6.300	14.800	157	PNA25/47   	30,0	20,0	42,0	0,8	0,3	0,5
30	52	20	27.500	41.500	7.300	12.900	181	PNA30/52   	35,0	20,0	47,5	0,8	0,3	0,5
35	55	20	29.500	47.000	8.300	11.400	177	PNA35/55   	40,0	20,0	50,5	0,8	0,3	0,5
40	62	20	31.000	53.000	9.300	10.200	227	PNA40/62   	45,0	20,0	58,0	0,8	0,3	0,5